SHARP

MIKRO KOMPONENTEN SYSTEM
MICRO-CHAÎNE
SISTEMA MICRO
MIKRO KOMPONENT SYSTEM
MICRO SISTEMI
MICRO SYSTEEM
SISTEMA DE MICRO COMPONENTE
MICRO COMPONENT SYSTEM

MODELL **MODELLO**
MODÈLE **MODEL**
MODELO **MODELO**
MODELL **MODEL**

XL-MP40H

BEDIENUNGSANLEITUNG **MANUALE DI ISTRUZIONI**
MODE D'EMPLOI **GEBRUIKSAANWIJZING**
MANUAL DE MANEJO **MANUAL DE OPERAÇÃO**
BRUKSANVISNING **OPERATION MANUAL**

COMPACT disc DIGITAL AUDIO

SAVING ENERGY STAND-BY POWER CONSUMPTION 0.9W

ENERGY

MP3

Mikro Komponenten System XL-MP40H besteht aus XL-MP40H (Hauptgerät) und CP-MP40H (Lautsprechersystem).

Micro-chaîne XL-MP40H composée de XL-MP40H (appareil principal) et CP-MP40H (enceinte acoustique).

Sistema micro XL-MP40H que consta de XL-MP40H (aparato principal) y CP-MP40H (sistema de altavoces).

XL-MP40H mikro komponent system bestående av XL-MP40H (huvudenhet) och CP-MP40H (högtalarsystem).

Micro sistemi XL-MP40H composto da XL-MP40H (apparecchio principale) e CP-MP40H (sistema di diffusori).

XL-MP40H micro systeem bestaande uit XL-MP40H (hoofdtoestel) en CP-MP40H (luidsprekersysteem).

XL-MP40H Sistema de Micro Componente composto de XL-MP40H (unidade principal) e CP-MP40H (sistema de alto-falante).

XL-MP40H Micro Component System consisting of XL-MP40H (main unit) and CP-MP40H (speaker system).

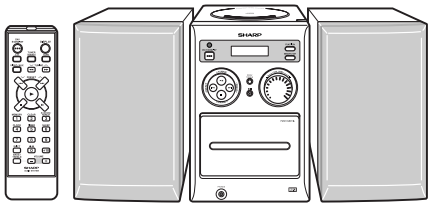

DEUTSCH 1
Siehe Seiten i bis vi und D-1 bis D-26.

FRANÇAIS 2
Se reporter aux pages i à vi et F-1 à F-26.

ESPAÑOL 3
Consulte las páginas i a vi y S-1 a S-26.

SVENSKA 4
Hänvisa till sidorna i till vi och V-1 till V-26.

ITALIANO 5
Leggere le pagine i a vi e I-1 a I-26.

NEDERLANDS 6
Raadpleeg de bladzijden i t/m vi en N-1 t/m N-26.

PORTUGUÊS 7
Favor consultar as páginas i a vi e P-1 a P-26.

ENGLISH 8
Please refer to pages i to vi and E-1 to E-26.

05/1/14 XL-MP40H(H)_FRONT.fm TINSZA040SJZZ

Downloaded From Disc-Player.com Sharp Manuals

BESONDERE ANMERKUNGEN
REMARQUES SPÉCIALES
NOTAS ESPECIALES
SÄRSKILDA ANMÄRKNINGAR
NOTE PARTICOLARI
BIJZONDERE OPMERKINGEN
NOTAS ESPECIAIS
SPECIAL NOTES

- Dieses Gerät entspricht den Anforderungen der EG-Richtlinien 89/336/EWG und 73/23/EWG mit Änderung 93/68/EWG.
- Ce matériel répond aux exigences contenues dans les directives 89/336/CEE et 73/23/CEE modifiées par la directive 93/68/CEE.
- Este aparato satisface las exigencias de las Directivas 89/336/CEE y 73/23/CEE, modificadas por medio de la 93/68/CEE.
- Denna utrustning uppfyller kraven enligt riktlinjerna 89/336/EEC och 73/23/EEC så som kompletteras av 93/68/EEC.
- Quest'apparecchio è conforme ai requisiti delle direttive 89/336/EEC e 73/23/EEC, come emendata dalla direttiva 93/68/EEC.
- **Dichiarazione di conformità**
  La società SHARP ELECTRONICS EUROPE GmbH dichiara che il prodotto SHARP MICRO SISTEMI XL-MP40H è costruito in conformità alle prescrizioni del D.M.n°548 del 28/8/95, pubblicato sulla G.U.n°301 del 28/12/95 ed in particolare è conforme a quanto indicato nell'art. 2, comma 1 dello stesso decreto.
- Dit apparaat voldoet aan de eisen van de richtlijnen 89/336/EEG en 73/23/EEG, gewijzigd door 93/68/EEG.
- Este equipamento obedece às exigências das directivas 89/336/CEE e 73/23/CEE, na sua versão corrigida pela directiva 93/68/CEE.
- This equipment complies with the requirements of Directives 89/336/EEC and 73/23/EEC as amended by 93/68/EEC.
- Dette udstyr overholder kravene i direktiv nr. 89/336/EEC og 73/23/EEC med tillaeg nr. 93/68/EEC.
- Dette produktet oppfyller betingelsene i direktivene 89/336/EEC og 73/23/EEC i endringen 93/68/EEC.
- Tämä laite täyttää direktiivien 89/336/EEC ja 73/23/EEC vaatimukset, joita on muutettu direktiivillä 93/68/EEC.
- Η εγκατάσταση αυτή ανταποκρίνεται στις απαιτήσεις των οδηγιών της Ευρωπαϊκής Ενωσης 89/336/ΕΟΚ και 73/23/ΕΟΚ, αυτοί συμπληρώθηκαν από την οδηγία 93/68/ΕΟΚ.

- Bei Einstellung der ON/STAND-BY-Taste auf STAND-BY ist die Netzspannung immer noch im Gerät vorhanden.
  Wenn die ON/STAND-BY-Taste auf STAND-BY eingestellt wird, kann das Gerät unter Verwendung der Timer-Betriebsart oder Fernbedienung in Betrieb gesetzt werden.
  Warnung:
  In diesem Gerät sind keine vom Benutzer wartbaren Teile vorhanden. Niemals Abdeckungen entfernen, außer wenn Sie dafür qualifiziert sind. In diesem Gerät sind gefährliche Spannungen vorhanden. Vor Ausführung von irgendwelchen Kundendienstarbeiten oder bei längerer Nichtverwendung des Gerätes stets den Netzstecker aus der Netzsteckdose ziehen.
- Lorsque la touche ON/STAND-BY est mise en STAND-BY, l'appareil est toujours sous tension.
  Lorsque la touche ON/STAND-BY se trouve sur la position STAND-BY, l'appareil est prêt à fonctionner par la minuterie ou la télécommande.
  Avertissement:
  Cet appareil contient des pièces non réparables par l'utilisateur. Personne non qualifiée n'enlèvera jamais les couvercles. L'appareil contenant des organes portés à haute tension, débrancher l'appareil avant toute réparation ou en période de non-utilisation.

Downloaded From Disc-Player.com Sharp Manuals

- Cuando el botón ON/STAND-BY está puesto en la posición STAND-BY, todavía hay tensión dentro del aparato.
  Cuando el botón ON/STAND-BY está puesto en la posición STAND-BY, el aparato puede ponerse en funcionamiento utilizando el modo del temporizador o el controlador remoto.

  Advertencia:
  Tenga en cuenta que dentro de este aparato no hay piezas que pueda reparar. No quite nunca las tapas a menos que se esté cualificado para hacerlo. Este aparato tiene en su interior tensiones peligrosas.
  Desenchufe siempre la clavija de la red del tomacorriente antes de realizar cualquier servicio de mantenimiento y cuando no se use el aparato durante un largo período de tiempo.

- När ON/STAND-BY knappen är i läge STAND-BY, finns nätspänning i apparaten.
  Med ON/STAND-BY knappen i läge STAND-BY kan apparaten startas med timerfunktion eller fjärrkontrollen.

  Varning:
  Apparaten innehåller inga delar som kan åtgärdas av kunden. Höljet får endast öppnas av kvalificerad personal. Apparaten innehåller farliga spänningar.
  Stickkontakten ska därför dras ut från nätuttaget före reparationsarbeten och bör dras ut om apparaten inte ska användas på mycket länge.

- Quando il tasto ON/STAND-BY si trova in posizione STAND-BY, all'interno dell'apparecchio c'è ancora la corrente.
  Se il tasto ON/STAND-BY si trova nella posizione STAND-BY, l'unità può essere accesa con il modo timer o con il telecomando.

  Avvertenza:
  L'apparecchio non contiene parti riparabili dall'utente.
  Non togliere mai i coperchi, a meno di non essere qualificati per farlo. All'interno dell'apparecchio ci sono tensioni pericolose, per cui si deve sempre staccare la spina del cavo d'alimentazione dalla presa di corrente prima di qualsiasi intervento di manutenzione e quando non si usa l'apparecchio per un lungo periodo di tempo.

- Wanneer de ON/STAND-BY toets in de STAND-BY stand staat, loopt er nog steeds stroom (netspanning) in het toestel.
  Wanneer de ON/STAND-BY toets in de STAND-BY stand staat, kan het toestel ingeschakeld worden via de timerfunctie of de afstandsbediening.

  Waarschuwing:
  Dit toestel bevat geen door de gebruiker te repareren onderdelen. Verwijder de behuizing nooit tenzij u deskundig bent op dit gebied. In het toestel loopt een gevaarlijke spanning; haal de stekker altijd uit het stopcontact alvorens onderhoud uit te voeren of wanneer het toestel voor langere tijd niet gebruikt wordt.

- Quando o botão ON/STAND-BY estiver ajustado na posição STAND-BY, a voltagem de alimentação ainda se encontra presente dentro do aparelho.
  Quando o botão ON/STAND-BY estiver ajustado na posição STAND-BY, o aparelho pode ser colocado em operação através do modo de programação horária ou pelo controle remoto.

  Advertência:
  Neste aparelho não há partes que podem ser consertadas pelo usuário. Nunca retire a tampa, a menos que você tenha qualificação para tal. Este aparelho contém voltagens perigosas. Remova sempre o cabo de alimentação da tomada antes de efetuar qualquer conserto ou quando deixar o aparelho muito tempo fora de uso.

- When the ON/STAND-BY button is set at STAND-BY position, mains voltage is still present inside the unit.
  When the ON/STAND-BY button is set at STAND-BY position, the unit may be brought into operation by the timer mode or remote control.

  Warning:
  This unit contains no user serviceable parts. Never remove covers unless qualified to do so. This unit contains dangerous voltages, always remove mains plug from the socket before any service operation and when not in use for a long period.

Downloaded From Disc-Player.com Sharp Manuals

- Når ON/STAND-BY-knappen er sat i STAND-BY positionen, er der stadig netspaending til stede i apparatet.
  Når ON/STAND-BY-knappen er sat i STAND-BY position, kan apparatet startes v.hj.a. timer-funksionen eller fjernbetjeningen.

  Advarsel:
  Apparatet indeholder ingen dele, der kan repareres af brugeren selv. Fjern aldrig kabinettet med mindre De er kvalificeret hertil. Apparatet indeholder farlig strømspaending. Traek altid stikket ud af stikkontakten før der foretages reparationer, eller hvis apparatet ikke er i brug i laengere tid.

PŘED SEJMUTÍM KRYTU NUTNO VYJMOUT VIDLICI ZE SÍŤOVÉ ZÁSUVKY.

PRED ZLOŽENÍM KRYTU JE NUTNÉ ODPOJIŤ PRÍSTROJ ZO SIETE.

DENNA APPARAT ÄR ANSLUTEN TILL 230 V VÄXELSTRÖM NÄR STICKPROPPEN ÄR INSKJUTEN I VÄGGUTTAGET. FÖR ATT FULLSTÄNDIGT KOPPLA IFRÅN APPARATEN, V.G. DRAG UT STICKPROPPEN.

- Audio-visuelles Material kann Urheberrechte umfassen, die ohne Genehmigung des Eigentümers dieser Urheberrechte nicht aufgenommen werden dürfen. Siehe die entsprechenden nationalen Gesetze.
- Le matériel audio-visuel peut comporter des oeuvres faisant l'objet de droits d'auteur qui ne peuvent être enregistrées sans l'autorisation du possesseur du droit d'auteur, veuillez vous référer aux réglementations nationales en vigueur.
- El material audiovisual puede consistir en trabajos que tengan derechos de autor y que no deben grabarse sin la autorización del poseedor de dichos derechos de autor. Sírvase consultar las leyes aplicables en su país.
- Audiovisuellt material kan innehålla upphovsrättsarbete som inte skall mångfaldigas utan tillstånd av copyrightinnehavaren. Se den tillämpliga lagen i ditt land.
- Il materiale audio-visivo che fosse soggetto a copyright non può essere registrato senza l'autorizzazione del possessore del copyright. Si prega di attenersi alle leggi in vigore sul territorio nazionale.
- Audio-visueel materiaal kan worden beschermd door auteursrechten, in welk geval het niet mag worden opgenomen zonder de toestemming van de auteursrechthouder. Zie voor nadere informatie de betreffende wetten in het land van gebruik.
- O material audiovisual pode consistir de trabalhos de direitos autorais que não devem ser gravados sem autorização do proprietário dos direitos. Favor consultar as leis vigentes em seu país.
- Audio-visual material may consist of copyrighted works which must not be recorded without the authority of the owner of the copyright. Please refer to relevant law in your country.

Downloaded From Disc-Player.com Sharp Manuals

- **Vorsicht:**
  Das Gerät weder Tropf- noch Spritzwasser aussetzen. Ansonsten besteht die Gefahr eines Brandes oder elektrischen Schlages. Es dürfen keine mit Flüssigkeiten gefüllten Gegenstände wie Vasen auf dem Gerät abgestellt werden.
- **Attention:**
  Pour éviter un incendie ou une secousse électrique, mettre l'appareil à l'abri de l'eau (éclaboussure, goutte). Ne pas poser sur l'appareil un récipient contenant du liquide.
- **Advertencia:**
  Para evitar incendios y descargas eléctricas, no exponga el aparato a goteo o salpicadura de líquidos. No deberán ponerse encima del aparato objetos que estén llenos de líquido, como por ejemplo un florero.
- **Varning:**
  Utsätt inte enheten för dropp eller stänk för att förhindra brand eller elektriska stötar. Inga vätskefyllda föremål såsom vaser får placeras på enheten.
- **Attenzione:**
  Per prevenire incendi o scosse elettriche, non fare gocciolare nessun liquido sull'apparecchio e non bagnarlo. Non collocarvi sopra nessun oggetto riempito d'acqua, come per esempio vasi.
- **Waarschuwing:**
  Stel het toestel niet bloot aan druipend of spattend water om brand en elektrische schokken te voorkomen. Met vloeistoffen gevulde voorwerpen, zoals vazen, mogen niet op het toestel geplaatst worden.
- **Cuidado:**
  Para evitar incêndio ou choque elétrico, não exponha este aparelho a gotejamento ou salpicamento de água. Não coloque objetos com água como, por exemplo, um vaso de flores, em cima do aparelho.
- **Warning:**
  To prevent fire or shock hazard, do not expose this appliance to dripping or splashing. No objects filled with liquids, such as vases, shall be placed on the apparatus.

- **Advarsel:**
  Til at forbygge ild og stød risiko, lad vaere med at undsaette denne indretning for drypning eller overstaenkning. Der må ikke anbringes nogen genstande fyldt med vand, som for eksempel vaser, på dette apparat.
- **Advarsel:**
  For å unngå brann eller kortslutning, utsett ikke produktet for vann eller fuktighet. Gjenstander som inneholder vaeske, feks. en blomstervase, må ikke plasseres oppå apparatet.
- **Varoitus:**
  Älä vie laitetta sateeseen tai kosteisiin tiloihin. Jos laite on kostunut, anna sen kuivua ennen kuin käytät sitä verkkovirralla. Nestettä sisältäviä astioita kuten esim. kukkamaljakoita ei saa asettaa laitteen päälle.

PŘÍSTROJ NEVYSTAVUJTE KAPAJÍCÍ NEBO STŘÍKAJÍCÍ VODĚ.

PRÍSTROJ NEVYSTAVUJTE KVAPKAJÚCEJ ALEBO STRIEKAJÚCEJ VODE.

Urządzenie należy chronić przed zalaniem i wilgocią.

- Dieses Produkt ist ein Laserprodukt der Klasse 1.
- Ce produit est classifié comme étant un LASER DE CLASSE 1.
- Este producto está clasificado como un PRODUCTO LÁSER DE CLASE 1.
- Denna produkt klassificeras som KLASS 1 LASERPRODUKT.
- Questo prodotto è classificato come CLASS 1 LASER PRODUCT.
- Dit product is geclassificeerd als een KLASSE 1 LASER PRODUCT.
- Este produto é classificado como PRODUTO LASER DE CLASSE 1.
- This product is classified as a CLASS 1 LASER PRODUCT.

- Dette produktet er klassifisert som et KLASSE 1 LASERPRODUKT.
- Dette produkt er klassificeret som et KLASSE 1 LASERPRODUKT.
- Tämä laite on luokiteltu LUOKAN 1 LASERLAITTEEKSI.
- Denna produkt klassificeras som KLASS 1 LASERAPPARAT.
- Tento výrobek je klasifikován jako LASEROVÝ VÝROBEK TŘÍDY 1.
- Tento výrobok je klasifikovaný ako LASEROVÝ VÝROBOK TRIEDY 1.

Downloaded From Disc-Player.com Sharp Manuals

● **VORSICHT**
Verwendung von Regelungen oder Einstellungen bzw. Durchführung von anderen Verfahren als die hierin angegebenen kann zum Aussetzen gefährlicher Strahlung führen.

Da der in diesem Compact Disc Player verwendete Laserstrahl für die Augen schädlich ist, ist das Gehäuse unter keinen Umständen zu zerlegen.
Wenden Sie sich für Wartungsarbeiten nur an berechtigten Fachhändler.

● **ATTENTION**
Respecter les indications données relatives à la manipulation, au réglage et au fonctionnement. En cas de non-respect, on s'exposera à une radiation dangereuse.

Éviter absolument de démonter l'appareil, qui utilise un rayon laser nuisible aux yeux. Pour toute réparation, s'adresser à une personne qualifiée.

● **PRECAUCIÓN**
El uso de los controles, ajustes o ejecución de procedimientos distintos de los especificados podría causar la exposición a radiación peligrosa.

No intente desmontar la caja ya que el haz de láser usado en este reproductor de discos compactos es perjudicial para los ojos. Para el servicio de reparación, consulte a una persona cualificada.

● **OBSERVERA**
Användning av reglage eller justeringar eller handhavande på annat sätt än som anges kan leda till farlig bestrålning.

Försök inte ta isär höljet eftersom CD-spelarens laserstråle är skadlig för ögonen. Överlåt service endast till kvalificerad personal.

● **ATTENZIONE**
L'uso dei comandi e l'effettuazione di regolazioni e procedimenti diversi da quelli specificati nel manuale possono provocare una pericolosa esposizione alle radiazioni.

Poiché il raggio laser usato in questo giradischi può danneggiare gli occhi, non smontare l'apparecchio. Per le riparazioni rivolgersi a personale specializzato.

● **LET OP**
Gebruik van regelaars, het maken van instellingen, gebruik of handelingen anders dan in deze gebruiksaanwijzing vermeld, kan gevaarlijke straling blootleggen.

De laserstraal in deze CD-speler kan de ogen beschadigen, Probeer derhalve de ombouw niet te verwijderen. Laat reparaties alleen over aan erkend onderhoudspersoneel.

● **CUIDADO**
O uso de controles, ajustes ou a execução de procedimentos além daqueles especificados aqui pode resultar em perigosa exposição à radiação.

Como os raios laser usados neste player de CD são perigosos para os olhos, não tente desmontar o aparelho. Solicite o conserto somente para pessoas especializadas.

● **CAUTION**
Use of controls, adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

As the laser beam used in this compact disc player is harmful to the eyes, do not attempt to disassemble the cabinet. Refer servicing to qualified personnel only.

VÝSTRAHA: VÝROBEK JE VYBAVEN LASEREM. PŘI NESPRÁVNÉ MANIPULACI S PŘÍSTROJEM V ROZPORU S TÍMTO NÁVODEM MŮŽE DOJÍT K NEBEZPEČNÉMU OZÁŘENÍ. NEOTVÍREJTE A NESNÍMEJTE PROTO ŽÁDNÉ KRYTY A PŘÍSTROJ NEOPRAVUJTE. OPRAVU A SERVIS SVĚŘTE ODBORNÉMU SERVISU.

VÝSTRAHA: VÝROBOK JE VYBAVENÝ LASEROM. PRI NESPRÁVNOM MANIPULOVANÍ S PRÍSTROJOM V ROZPORE S TÝMTO NÁVODOM MÔŽE DÔJSŤ K NEBEZPEČNÉMU OŽIARENIU. NEODKRÝVAJTE PRETO ŽIADNE KRYTY A PRÍSTROJ NEOPRAVUJTE. OPRAVU A SERVIS PRENECHAJTE ODBORNÉMU SERVISU.

Downloaded From Disc-Player.com Sharp Manuals

Eigenschaften der Laserdiode
- Material: GaAlAs
- Wellenlänge: 780 nm
- Emissionsdauer: kontinuierlich
- Laser-Ausgang: max. 0,6 mW

Caractéristiques de la diode laser
- Matière: GaAlAs
- Longueur d'onde: 780 nm
- Durée d'émission: ininterrompue
- Puissance de sortie laser maximale: 0,6 mW

Características del diodo láser
- Material: GaAlAs
- Longitud de onda: 780 nm
- Duración de emisión : continua
- Salida de láser: máx. 0,6 mW

Laserdiodens egenskaper
- Material: GaAlAs
- Våglängd: 780 nm
- Utstrålningsvaraktighet: kontinuerlig
- Lasereffekt: max. 0,6 mW

Proprietà del diodo laser
- Materiale: GaAlAs
- Lunghezza d'onda: 780 nm
- Durata di emissione: continua
- Uscita massima del laser: 0,6 mW

Laser diode specificaties
- Materiaal: GaAlAs
- Golflengte: 780 nm
- Stralingsduur: doorlopend
- Laseruitgang: max. 0,6 mW

Propriedades do diodo laser
- Material: GaAlAs
- Comprimento de onda: 780 nm
- Duração da emissão: contínua
- Saída de laser: máx. 0,6 mW

Laser Diode Properties
- Material: GaAlAs
- Wavelength: 780 nm
- Emission Duration: continuous
- Laser Output: max. 0.6 mW

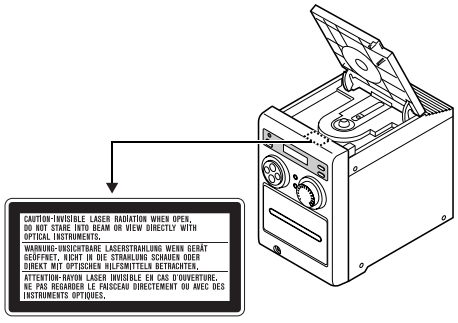
CAUTION-INVISIBLE LASER RADIATION WHEN OPEN.
DO NOT STARE INTO BEAM OR VIEW DIRECTLY WITH
OPTICAL INSTRUMENTS.
WARNUNG-UNSICHTBARE LASERSTRAHLUNG WENN GERÄT
GEÖFFNET, NICHT IN DIE STRAHLUNG SCHAUEN ODER
DIREKT MIT OPTISCHEN HILFSMITTELN BETRACHTEN.
ATTENTION-RAYON LASER INVISIBLE EN CAS D'OUVERTURE.
NE PAS REGARDER LE FAISCEAU DIRECTEMENT OU AVEC DES
INSTRUMENTS OPTIQUES.

ADVARSEL-USYNLIG LASERSTRÅLING VED ÅBNING. SE IKKE IND I STRÅLEN-HELLER IKKE MED OPTISKE INSTRUMENTER.

VARO! AVATTAESSA OLET ALTTIINA NÄKYMÄTÖN LASERSÄTEILYLLE. ÄLÄ TUIJOTA SÄTEESEEN ÄLÄKÄ KATSO SITÄ OPTISEN LAITTEEN LÄPI.

VARNING-OSYNLIG LASERSTRÅLNING NÄR DENNA DEL ÄR ÖPPNAD. STIRRA EJ IN I STRÅLEN OCH BETRAKTA EJ STRÅLEN GENOM OPTISKT INSTRUMENT.

VAROITUS! LAITTEEN KÄYTTÄMINEN MUULLA KUIN TÄSSÄ KÄYTTÖOHJEESSA MAINITULLA TAVALLA SAATTAA ALTISTAA KÄYTTÄJÄN TURVALLISUUSLUOKAN 1 YLITTÄVÄLLE NÄKYMÄTTÖMÄLLE LASERSÄTEILYLLE.

VARNING - OM APPARATEN ANVÄNDS PÅ ANNAT SÄTT ÄN I DENNA BRUKSANVISNING SPECIFICERAS. KAN ANVÄNDAREN UTSÄTTAS FÖR OSYNLIG LASER-STRÅLNING, SOM ÖVERSKRIDER GRÄNSEN FÖR LASERKLASS 1.

Downloaded From Disc-Player.com Sharp Manuals

Introduction

Thank you for purchasing this SHARP product. To obtain the best performance from this product, please read this manual carefully. It will guide you in operating your SHARP product.

Accessories

Please confirm that the following accessories are included.

 **Remote control × 1**	 **"AAA" size battery (UM-4, R03, HP-16 or similar) × 2**
 **FM/AM loop aerial × 1**	**AC power lead × 1**

Caution:
Do not use the supplied AC power lead for other equipment. Fire or electric shock may result.

Note:
Only the above accessories are included.

Contents

Page

■ **General Information**
Precautions 2
Controls and indicators 3, 4

■ **Preparation for Use**
System connections 5, 6
Remote control 6

■ **Basic Operation**
Sound control 7
Setting the clock 8

■ **Disc Playback**
Listening to a disc . . . . . 9 - 11
Advanced disc playback . . . . . 12 - 14

■ **Radio**
Listening to the radio 15
Listening to the memorised station 16

■ **Tape Playback**
Listening to a cassette tape 17

■ **Tape Recording**
Recording on a cassette tape 18, 19

■ **Advanced Features**
Timer and sleep operation . . . . . 20 - 22
Enhancing your system 22

■ **References**
Troubleshooting chart 23, 24
Maintenance 25
Specifications 26

Downloaded From Disc-Player.com Sharp Manuals

Precautions

■ General

- Please ensure that the equipment is positioned in a well ventilated area and that there is at least 10 cm (4") of free space along the sides and back. There must also be a minimum of 20 cm (8") of free space on the top of the unit.



- Use the unit on a firm, level surface free from vibration.
- Keep the unit away from direct sunlight, strong magnetic fields, excessive dust, humidity and electronic/electrical equipment (home computers, facsimiles, etc.) which generate electrical noise.
- Do not place anything on top of the unit.
- Do not expose the unit to moisture, to temperatures higher than 60°C (140°F) or to extremely low temperatures.
- If your system does not work properly, disconnect the AC power lead from the wall socket. Plug the AC power lead back in, and then turn on your system.
- In case of an electrical storm, unplug the unit for safety.
- Hold the AC power plug by the head when removing it from the wall socket, as pulling the lead can damage internal wires.
- **Do not remove the outer cover, as this may result in electric shock. Refer internal service to your local SHARP service facility.**
- The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, tablecloths, curtains, etc.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- Attention should be drawn to the environmental aspects of battery disposal.
- The apparatus is designed for use in moderate climate.
- This unit should only be used within the range of 5°C - 35°C (41°F - 95°F).

Warnings:

- The voltage used must be the same as that specified on this unit. Using this product with a higher voltage other than that which is specified is dangerous and may result in a fire or other type of accident causing damage. SHARP will not be held responsible for any damage resulting from use of this unit with a voltage other than that which is specified.
- **CD players use a laser pickup which can damage the eyes if viewed directly. Do not look at the pickup, and do not touch the pickup directly.**

■ Volume control

The sound level at a given volume setting depends on speaker efficiency, location, and various other factors. It is advisable to avoid exposure to high volume levels. Do not turn the volume on to full at switch on and listen to music at moderate levels.

■ Care of compact discs

Compact discs are fairly resistant to damage, however mistracking can occur due to an accumulation of dirt on the disc surface. Follow the guidelines below for maximum enjoyment from your CD collection and player.

- Do not write on either side of the disc, particularly the non-label side from which signals are read. Do not mark this surface.
- Keep your discs away from direct sunlight, heat, and excessive moisture.
- Always hold the CDs by the edges. Fingerprints, dirt, or water on the CDs can cause noise or mistracking. If a CD is dirty or does not play properly, clean it with a soft, dry cloth, wiping straight out from the centre, along the radius.



Downloaded From Disc-Player.com Sharp Manuals

Controls and indicators

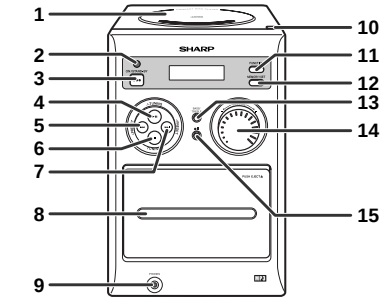



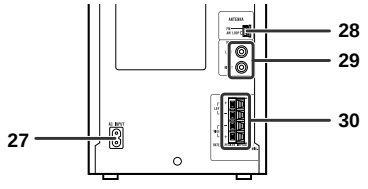

	Reference page
1. Disc Compartment	10
2. Remote Sensor	6
3. On/Stand-by Button	6
4. Disc Play or Pause, Tape Play, Tuning Up Button	10, 15, 17
5. Disc Track Down or Fast Reverse, Tape Rewind, Tuner Preset Down Button	12, 16, 17
6. Disc or Tape Stop, Tuning Down Button	10, 15, 17
7. Disc Track Up or Fast Forward, Tape Fast Forward, Tuner Preset Up Button	12, 16, 17
8. Cassette Compartment	17
9. Headphone Socket	11
10. Disc Eject Button	10
11. Function Selector Button	10, 15, 17
12. Memory/Set Button	14, 16
13. Bass/Treble Selector Button	7
14. Volume Control	7
15. Tape Record Pause Button	18, 19
16. Tape Record Indicator	18
17. Sleep Indicator	21
18. Disc Random Play Indicator	13
19. Memory Indicator	14, 16
20. MP3 Track Indicator	10
21. WMA Track Indicator	10
22. Timer Play Indicator	20
23. Disc Play Indicator	10
24. Disc Repeat Indicator	13
25. FM Stereo Mode Indicator	15
26. FM Stereo Receiving Indicator	15
27. AC Power Input Socket	5, 6
28. FM/AM Loop Aerial Socket	5
29. Video/Auxiliary (Audio Signal) Input Sockets	22
30. Speaker Terminals	5

Downloaded From Disc-Player.com Sharp Manuals

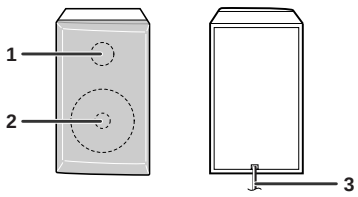

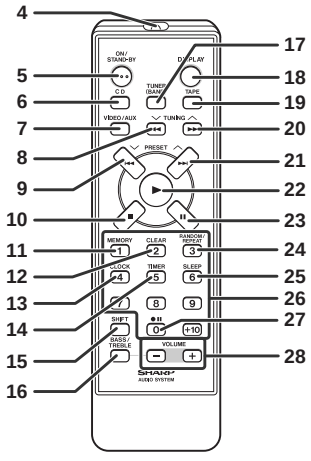

1. **Bass Reflex Duct**
2. **Full-Range Speaker**
3. **Speaker Wire**

Placing the speaker system:
The left and right speakers have individual shapes. For best performance, place the speakers according to the illustration on the right.

Left speaker **Right speaker**



Note:
The speaker grilles are not removable.

	Reference page
4. Remote Control Transmitter	6
5. On/Stand-by Button	6
6. Disc Button	10
7. Video/Auxiliary Button	22
8. Disc Fast Reverse, Tuning Down Button	12, 15
9. Disc Track Down, Tape Rewind, Tuner Preset Down, Time Down Button	8, 12, 16, 17
10. Disc or Tape Stop Button	10, 17
11. Memory Button	8, 14, 16
12. Clear Button	14, 16
13. Clock Button	8
14. Timer Button	20
15. Shift Button	8
16. Bass/Treble Selector Button	7
17. Tuner and Band Selector Button	15
18. MP3/WMA Display Button	11, 12
19. Tape Button	17
20. Disc Fast Forward, Tuning Up Button	12, 15
21. Disc Track Up, Tape Fast Forward, Tuner Preset Up, Time Up Button	8, 12, 16, 17
22. Disc or Tape Play Button	10, 17
23. Disc Pause Button	10
24. Random/Repeat Button	13
25. Sleep Button	21
26. Direct Search Buttons	13
27. Tape Record Pause Button	18, 19
28. Volume Up and Down Buttons	7

Downloaded From Disc-Player.com Sharp Manuals

System connections

Make sure to unplug the AC power lead before making any connections.

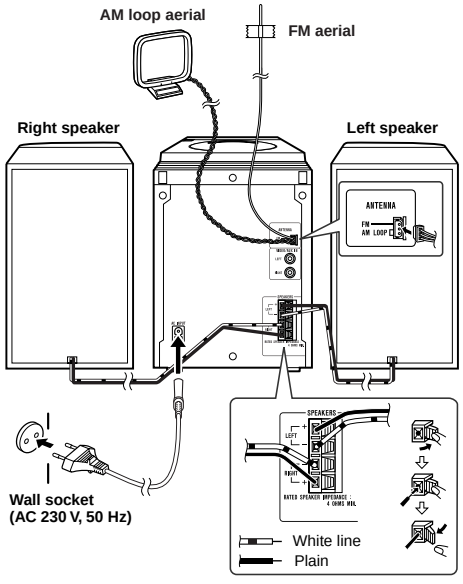

■ Aerial connection

Connect the FM/AM loop aerial to the ANTENNA socket.
Position the FM aerial wire and rotate the AM loop aerial for optimum reception. Place the AM loop aerial on a shelf, or attach it to a stand or a wall.

Notes:
- Placing the aerial on the unit or near the AC power lead may cause noise pickup. Place the aerial away from the unit for better reception.
- Do not connect the attached FM aerial to an external aerial as this may cause trouble.

Installing the AM loop aerial:

< Assembling >



< Attaching to the wall >



Wall Screws (not supplied)

■ Speaker connection

Connect the wire with the white line to the minus (-) terminal and the plain wire to the plus (+) terminal.

Caution:
- **Do not let the bare speaker wires touch each other.**
- Use speakers with an impedance of 4 ohms or more, as lower impedance speakers can damage the unit.
- Do not mistake the right and the left channels. The right speaker is the one on the right side when you face the unit.



Incorrect

Downloaded From Disc-Player.com Sharp Manuals

■ AC power connection

After checking all the connections have been made correctly, connect the AC power lead to the AC power input socket, then plug the AC power lead of this unit into the wall socket.

Notes:
- Unplug the AC power lead from the wall socket if the unit will not be in use for a prolonged period of time.
- Never use a power lead other than the one supplied. Otherwise, a malfunction or an accident may occur.

■ To turn the power on

Press the ON/STAND-BY button to turn the power on.

After use:

Press the ON/STAND-BY button to enter the power stand-by mode.

Remote control

■ Battery installation

1 **Remove the battery cover.**
2 **Insert the supplied batteries according to the direction indicated in the battery compartment.**
When inserting or removing the batteries, push them toward the ⊖ battery terminals.
3 **Replace the cover.**



Precautions for battery use:
- Replace all old batteries with new ones at the same time.
- Do not mix old and new batteries.
- Remove the batteries if the unit is not to be used for long periods of time. This will prevent potential damage due to battery leakage.

Caution:
- Do not use rechargeable batteries (nickel-cadmium battery, etc.).
- Installing the batteries incorrectly may cause the unit to malfunction.

Battery removal:
Remove the battery cover. Push each battery toward the ⊖ battery terminal and take them out.

Notes concerning use:
- Replace the batteries if the operating distance is reduced or if the operation becomes erratic. Purchase 2 "AAA" size batteries (UM-4, R03, HP-16 or similar).
- Periodically clean the transmitter on the remote control and the sensor on the unit with a soft cloth.
- Exposing the sensor on the unit to strong light may interfere with operation. Change the lighting or the direction of the unit.
- Keep the remote control away from moisture, heat, shock, and vibrations.

■ Test of the remote control

Check the remote control after checking all the connections (see pages 5 - 6).
Point the remote control directly at the remote sensor on the unit.

The remote control can be used within the range shown:
Press the ON/STAND-BY button.
Does the power turn on? Now, you can enjoy music.

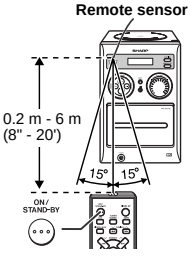

Downloaded From Disc-Player.com Sharp Manuals

Sound control

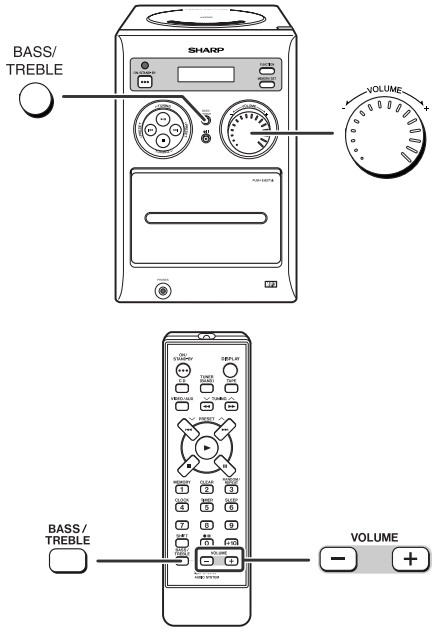

■ Adjusting the volume

Main unit operation:
When the VOLUME control is turned clockwise, the volume will increase. When it is turned anti-clockwise, the volume will decrease.

Remote control operation:
Press the VOLUME (- or +) button to increase or decrease the volume.



■ Adjusting the bass

Main unit operation:
1 Press the BASS/TREBLE button to select "BASS".
2 Within 5 seconds, turn the VOLUME control to adjust the bass.

Remote control operation:
1 Press the BASS/TREBLE button to select "BASS".
2 Within 5 seconds, press the VOLUME (- or +) button to adjust the bass.



■ Adjusting the treble

Main unit operation:
1 Press the BASS/TREBLE button to select "TRE".
2 Within 5 seconds, turn the VOLUME control to adjust the treble.

Remote control operation:
1 Press the BASS/TREBLE button to select "TRE".
2 Within 5 seconds, press the VOLUME (- or +) button to adjust the treble.



05/1/14 XL-MP40H(H)E1.fm TINSZA040SJZZ

Downloaded From Disc-Player.com Sharp Manuals

Setting the clock

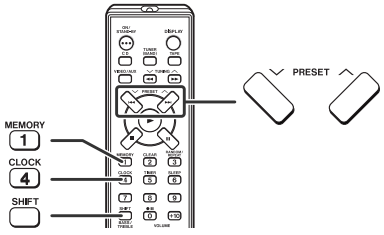

This may be operated only with the remote control.
In this example, the clock is set for the 24-hour (0:00) display.

1 **Press the SHIFT button and then the CLOCK button. Within 5 seconds, press the SHIFT button and then the MEMORY button.**



2 **Within 1 minute, press the PRESET (∨ or ∧) button to select 24-hour or 12-hour display, then press the SHIFT button and then the MEMORY button.**

"0:00" → The 24-hour display will appear.
(0:00 - 23:59)
"AM 12:00" → The 12-hour display will appear.
(AM 12:00 - PM 11:59)

3 **Within 1 minute, press the PRESET (∨ or ∧) button to adjust the hour, then press the SHIFT button and then the MEMORY button.**

Press the PRESET (∨ or ∧) button once to advance the time by 1 hour. Hold it down to advance continuously.

4 **Within 1 minute, press the PRESET (∨ or ∧) button to adjust the minutes, then press the SHIFT button and then the MEMORY button.**

Press the PRESET (∨ or ∧) button once to advance the time by 1 minute. Hold it down to advance continuously.

To confirm the time display:
Press the SHIFT button and then the CLOCK button.
The time display will appear for about 5 seconds.

Note:
The "0:00" or time will flash when the AC power supply is restored after a power failure or unplugging the unit.
Readjust the clock as follows.

To readjust the clock:
Perform "Setting the clock" from the beginning. If the "0:00" is not flashing in step 1, step 2 (for selecting the 24-hour or 12-hour display) will be skipped.

To change the 24-hour or 12-hour display:
1 Clear all the programmed contents. [Refer to "Clearing all the memory (reset)" on page 24 for details.]
2 Perform "Setting the clock" from the beginning.

Downloaded From Disc-Player.com Sharp Manuals

Listening to a disc

This system can play back a standard CD, CD-R/RW in the CD format and CD-R/RW with MP3 or WMA files, but cannot record on them.
Some audio CD-R and CD-RW discs may not be playable due to the state of the disc or the equipment used for recording.

MP3:
MP3 is a form of compression. It is an acronym which stands for MPEG Audio Layer 3.
MP3 is a type of audio code which is processed by significant compression from the original audio source with very little loss in sound quality.

- The MP3 track indicator will light up when an MP3 track is read.
- This system supports MPEG 1 Layer 3, MPEG 2 Layer 3, and VBR files.
- During VBR file playback, time counter in the display may differ from its actual playback time.

WMA:
WMA files are ASF (Advanced Systems Format) audio files which are compressed with Windows Media Audio codec. WMA is developed by Microsoft as an audio format file for Windows Media Player.

- The WMA track indicator will light up when a WMA track is read.
- Supported bit rates for WMA files range from 64 kbps to 160 kbps.

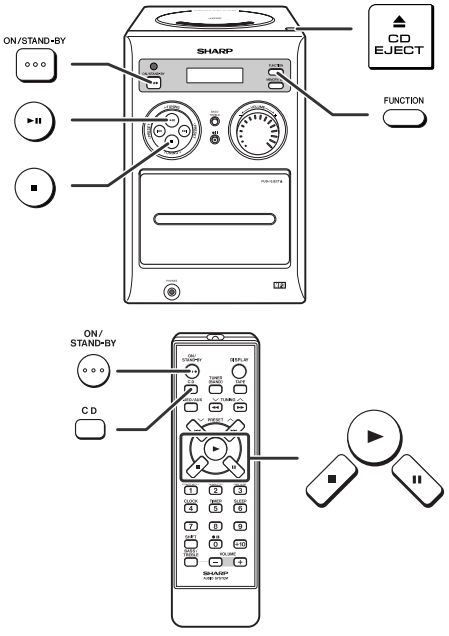

Downloaded From Disc-Player.com Sharp Manuals

1 **Press the ON/STAND-BY button to turn the power on.**

2 **Press the FUNCTION button until "CD DISC" appears on the display.**
When operating with the remote control, press the CD button.

3 **Press the ⏏ CD EJECT button to open the disc compartment.**

4 **Place the disc on the spindle, label side up.**

5 **Close the disc compartment by firmly pushing the corner marked "PUSH CLOSE".**



[MP3] MP3 track indicator



Total number of tracks

[CD]



Total number of tracks Total playing time

[WMA] WMA track indicator



Total number of tracks

- Due to the structure of its disc information, it takes longer (approximately 20 to 90 seconds) to read a CD-R/RW disc recorded in the MP3 or WMA format than a normal CD.

6 **Press the ⏯ (▶) button to start playback from track 1.**

Disc play indicator



When the last track on the disc has finished playing, the unit will stop automatically.

To interrupt playback:
Main unit operation:
Press the ⏯ button.
To resume playback from the same point, press the ⏯ button again.



Remote control operation:
Press the ⏸ button.
To resume playback from the same point, press the ▶ button.

To stop playback:
Press the ■ button.

To remove the disc:
Whilst in the stop mode, press the ⏏ CD EJECT button.

Caution:
- Do not play discs with special shapes (heart or octagon shaped) as it may cause malfunctions.
- If a disc is damaged, dirty, or loaded upside down, "NO DISC" will appear on the display.
- Keep foreign objects out of the disc compartment.
- Subjecting the unit to shock or vibration may cause mistracking.
- When the unit is not being used, be sure to close the disc compartment. If it is left open, the lens may be covered with dust and the unit may not operate properly.
- If TV or radio interference occurs during disc operation, move the unit away from it.

Downloaded From Disc-Player.com Sharp Manuals

Listening to a disc (continued)

■ Headphones

- Before plugging in or unplugging the headphones, reduce the volume.
- Be sure your headphones have a 3.5 mm (1/8") diameter plug and impedance between 16 and 50 ohms. The recommended impedance is 32 ohms.
- Plugging in the headphones disconnects the speakers automatically. Adjust the volume using the VOLUME control.

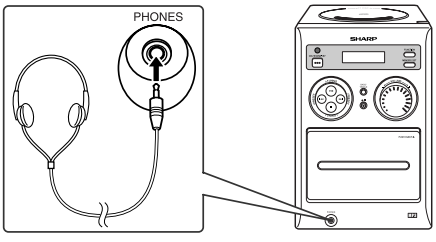

■ To change the display (CD-R/RW discs recorded in the MP3 or WMA format only)

Whilst in the stop mode or playback mode, press the DISPLAY button.
Each time the button is pressed, the display will change as follows.

[When in the stop mode]

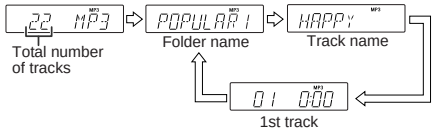

- To check the total number of tracks, press the ■ button.

[When in the playback mode]

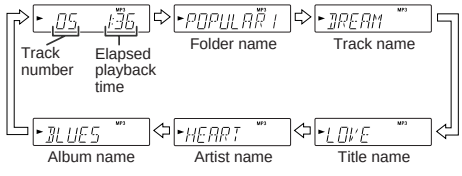

Downloaded From Disc-Player.com Sharp Manuals

Advanced disc playback

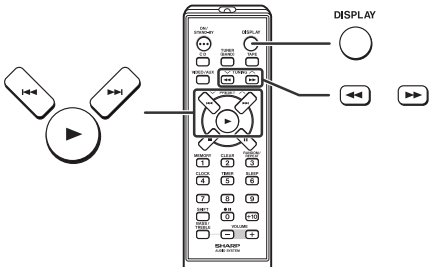

■ To select the desired folder or track by name (CD-R/RW discs recorded in the MP3 or WMA format only)

1	**Whilst in the stop mode, press the DISPLAY button on the remote control to display the folder name.**	
2	**Select the desired folder by pressing the I◄◄ or ►►I button.**	
3	**Press the DISPLAY button to display the track name.**	
4	**Select the desired track by pressing the I◄◄ or ►►I button.**	
5	**Press the ► (►II) button to begin playback.**	

■ To locate the beginning of a track

To move to the beginning of the next track:
Press the ►►I button for less than 0.5 seconds during playback.
To restart the track being played:
Press the I◄◄ button for less than 0.5 seconds during playback.

Note:
You can skip to any track by pressing the I◄◄ or ►►I button repeatedly until the desired track number appears.

■ To locate the desired portion

Sound will be heard for a CD, but not for CD-R/RW discs recorded in the MP3 or WMA format. (Check the displayed playback time for these discs.)

For fast forward:
Press and hold down the ►► button during playback.
For fast reverse:
Press and hold down the ◄◄ button during playback.

Notes:
- Normal playback will resume when the ◄◄ or ►► button is released.
- When the end of the last track is reached during fast forward, "END" will appear on the display and disc operation will be paused. When the beginning of the first track is reached during fast reverse, the disc will start playback automatically.
- The I◄◄ or ►►I button on the main unit allows you to locate the desired portion.

Downloaded From Disc-Player.com Sharp Manuals

Advanced disc playback (continued)

■ Direct search of the track

By using the direct search buttons, the desired tracks can be played.

1 Whilst in the stop mode, use the direct search buttons on the remote control to select the desired track.



Selected track number

- The direct search buttons allow you to select up to number 9.
- When selecting number 10 or higher, use the "+10" button.

A. For example, to choose 13

1 Press the "+10" button once.
2 Press the "3" button.

B. For example, to choose 30

1 Press the "+10" button three times.
2 Press the "0" button.

2 Press the ► (▶II) button to start playback.

Playback of the selected track is started. When the last track on the disc has finished playing, the unit will stop automatically.

To stop playback:
Press the ■ button.

Notes:

- The selected track can be started simply by pressing the direct search buttons during playback. [It is not necessary to press the ► (▶II) button.]
- A track number higher than the number of tracks on the disc cannot be selected.
- During random play, direct search is not possible.
- For CD-R/RW discs recorded in the MP3 or WMA format, you can select the track number but cannot select the folder by pressing the direct search buttons.

■ Repeat or random play

You can select one of the playback mode; "Repeat play", "Random play" and "Normal play".

1 Press the SHIFT button and then the RANDOM/REPEAT button.

2 Repeat step 1 to select the desired playback mode.

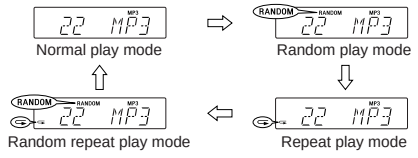

3 Press the ► (▶II) button to start playback.

To repeat a programmed sequence:
Perform steps 1 - 4 in the "Programmed play" section on page 14 and then select repeat play.

Notes:

- Random play will stop automatically when all tracks are played once. (The same track will not be played back twice.)
- In random play, the unit will select and play tracks automatically. (You cannot select the order of the tracks.)
- If you press the ▶▶I button during random play, you can move to the next track by the random operation. On the other hand, the I◀◀ button does not allow you to move to the previous track. The beginning of the track being played will be located.

Caution:
After performing repeat play, be sure to press the ■ button. Otherwise, the disc will play continuously.

To cancel repeat or random play:
Press the SHIFT button and then the RANDOM/REPEAT button. Repeat this to select the normal playback mode.

Downloaded From Disc-Player.com Sharp Manuals

■ Programmed play

You can choose up to 32 selections for playback in the order you like.

1 **Whilst in the stop mode, use the direct search buttons to select the desired track.**



Selected track number

You can also select a track by pressing the ⏮ or ⏭ button.

2 **Press the SHIFT button and then the MEMORY button to save the track number.**



Playback order

- When the track is memorised, "MEMORY" will appear.
- On the main unit, press the MEMORY/SET button.

3 **Repeat steps 1 - 2 for other tracks. Up to 32 tracks can be programmed.**

If you make a mistake, the programmed tracks can be cleared by pressing the SHIFT button and then the CLEAR button.

4 **Press the ► (▶II) button to start playback.**

To clear the programmed selections:
Whilst the "MEMORY" indicator is lit, set the CD to the stop mode, then press the SHIFT button and then the CLEAR button.
Each time the button is pressed, one track will be cleared, beginning with the last track programmed. When all the tracks are cleared, "MEMORY" will disappear.

Adding tracks to the programme:
If a programme has been previously stored, the "MEMORY" indicator will be displayed. Then follow steps 1 - 2 to add tracks. The new tracks will be stored after the last track of the original programme.

Notes:

- Opening the disc compartment automatically cancels the programmed sequence.
- Even if you press the ON/STAND-BY button to enter the stand-by mode or change the function from CD to another, the programmed selections will not be cleared.
- During the programme operation, random play is not possible.
- For CD-R/RW discs recorded in the MP3 or WMA format, you can select the track number but cannot select the folder by pressing the direct search buttons.

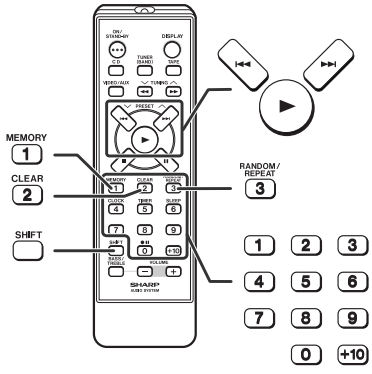

Downloaded From Disc-Player.com Sharp Manuals

Listening to the radio

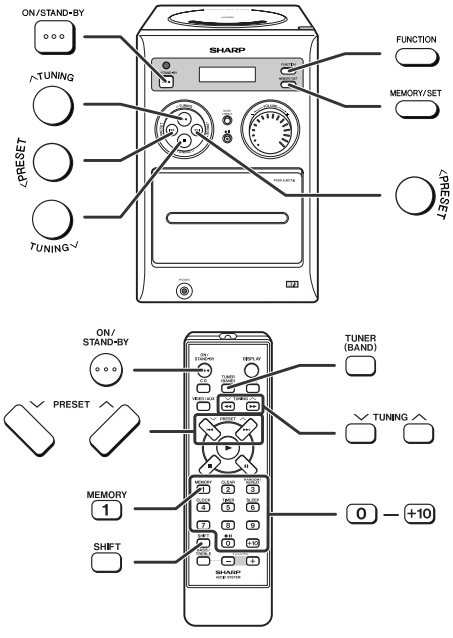

1 **Press the ON/STAND-BY button to turn the power on.**

2 **Press the FUNCTION button until "FM" or "AM" appears on the display.**

When operating with the remote control, press the TUNER (BAND) button to select "FM" or "AM".

3 **Press the TUNING (∨ or ∧) button to tune in to the desired station.**

Manual tuning:

Press the TUNING button as many times as required to tune in to the desired station.

Auto tuning:

When the TUNING button is pressed for more than 0.5 seconds, scanning will start automatically and the tuner will stop at the first receivable broadcast station.

Notes:

- When radio interference occurs, auto scan tuning may stop automatically at that point.
- Auto scan tuning will skip weak signal stations.
- To stop the auto tuning, press the TUNING button again.

To receive an FM stereo transmission:

Press the FUNCTION [TUNER (BAND)] button to display the "ST" indicator.

- "□" will appear when an FM broadcast is in stereo.
- If the FM reception is weak, press the FUNCTION [TUNER (BAND)] button to extinguish the "ST" indicator. The reception changes to monaural, and the sound becomes clearer.



FM stereo mode indicator

FM stereo receiving indicator

Downloaded From Disc-Player.com Sharp Manuals

Listening to the memorised station

■ Memorising a station

You can store 40 AM and FM stations in memory and recall them at the push of a button. (Preset tuning)

1 **Perform steps 1 - 3 in "Listening to the radio" on page 15.**

2 **Press the MEMORY/SET button to enter the preset tuning saving mode.**

3 **Within 5 seconds, press the PRESET (∨ or ∧) button to select the preset channel number.**

Store the stations in memory, in order, starting with preset channel 1.

4 **Within 5 seconds, press the MEMORY/SET button to store that station in memory.**

If the "MEMORY" and preset number indicators go out before the station is memorised, repeat the operation from step 2.

5 **Repeat steps 1 - 4 to set other stations, or to change a preset station.**

When a new station is stored in memory, the station previously memorised will be erased.

Notes:

- On the remote control, press the SHIFT button and then the MEMORY button in step 2 and 4.
- The backup function protects the memorised stations for a few hours should there be a power failure or the AC power lead disconnection.

■ To recall a memorised station

Press the PRESET (∨ or ∧) button for less than 0.5 seconds to select the desired station.

To select a preset station with the direct number buttons:
Press the corresponding number ("0" - "+10").

Example:
To select 28, press "+10", "+10" and "8".

■ To scan the preset stations

The stations saved in memory can be scanned automatically. (Preset memory scan)

1 Press the PRESET (∨ or ∧) button for more than 0.5 seconds. The preset number will flash and the programmed stations will be tuned in sequentially, for 5 seconds each.
2 Press the PRESET (∨ or ∧) button again when the desired station is located.

■ To clear a memorised station

1 Recall the memorised station.
2 Whilst it is displayed, press the SHIFT button and then the MEMORY button.
3 Within 5 seconds, press the SHIFT button and then the CLEAR button.

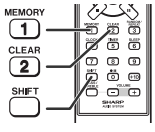

■ To erase entire preset memory

1 Press the ON/STAND-BY button to enter the power stand-by mode.
2 Whilst pressing down the FUNCTION button and the ●II button, press the ON/STAND-BY button until "TUCL" appears.

Downloaded From Disc-Player.com Sharp Manuals

Listening to a cassette tape

Before playback:

- **For playback, use normal or low-noise tapes for the best sound. (Metal or CrO_2 tapes are not recommended.)**
- Do not use C-120 tapes or poor-quality tapes, as they may cause malfunctions.
- Before loading a tape into the cassette compartment, tighten the slack with a pen or a pencil.

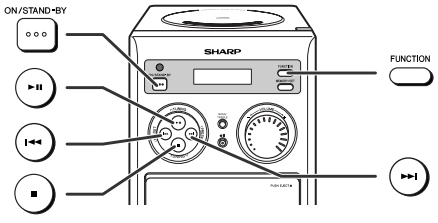

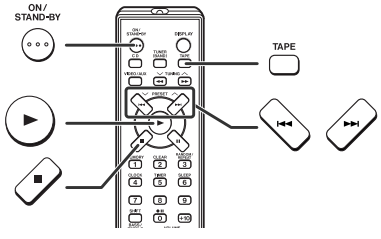

1	**Press the ON/STAND-BY button to turn the power on.**
2	**Press the FUNCTION button until "TAPE" appears on the display.** When operating with the remote control, press the TAPE button.
3	**Open the cassette compartment by pushing the area marked "PUSH EJECT ⏏".** 
4	**Load a cassette into the cassette compartment with the side to be played facing toward you.**
5	**Close the cassette compartment by pushing the area marked "PUSH EJECT ⏏".**
6	**Press the ⏯ (▶) button to start playback.**

To stop playback:
Press the ■ button.

Fast forward/rewind:
To advance the tape, press the ⏭ button. To rewind it, press the ⏮ button.

Caution:

- To remove the cassette, press the ■ button, and then open the compartment.
- Before changing from one tape operation to another, press the ■ button.
- If a power failure occurs during tape operation, the tape head will remain engaged with the tape and the cassette compartment will not open. In this case, wait until the power is restored.
- Even if the ⏯ (⏸) button is pressed during tape playback, the unit will not enter the pause mode.

Downloaded From Disc-Player.com Sharp Manuals

Recording on a cassette tape

Before recording:
- When recording important selections, make a preliminary test to ensure that the desired material is properly recorded.
- SHARP is not liable for damage or loss of your recording arising from malfunction of this unit.
- The volume and sound controls can be adjusted with no effect on the recorded signal (Variable Sound Monitor).
- **For recording, use only normal tapes. Do not use metal or CrO_2 tapes.**
- Do not use C-120 tapes or poor-quality tapes, as they may cause malfunctions.

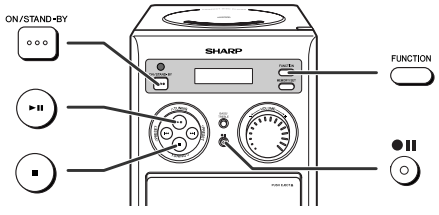

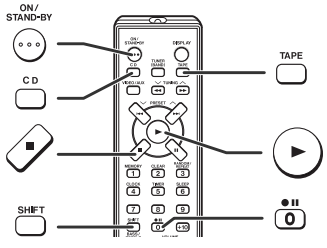

Erase-prevention tab of cassette tapes:
- When recording on a cassette tape, make sure that the erase-prevention tabs are not removed. Cassettes have removable tabs that prevent accidental recording or erasing.
- To protect the recorded sound, remove the tab after recording. Cover the tab hole with adhesive tape to record on the tape without the tab.

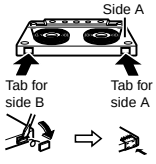

■ Recording from a disc

1 **Press the ON/STAND-BY button to turn the power on.**

2 **Press the FUNCTION button until "CD DISC" appears on the display.**
When operating with the remote control, press the CD button.

3 **Load the desired disc.**

4 **Load a cassette into the cassette compartment with the side to be recorded on facing you.**
Wind past the leader of the tape, on which recording cannot be performed.

5 **Press the ●II button.**
- Recording will be paused.



- On the remote control, press the SHIFT button and then the ●II button.

6 **Press the ▶II (▶) button to start recording.**
- Playback of the disc will start in a few seconds after the tape starts.
- When the playback of the disc is finished or the end of the tape is reached, the disc and the cassette will stop automatically.

Downloaded From Disc-Player.com Sharp Manuals

Recording on a cassette tape (continued)

To perform programmed recording:

1 Programme tracks (see page 14).
2 Press the ●II button.
3 Press the ▶II (▶) button to start recording.

To stop recording:
Press the ■ button.

Note:
If you use the remote control, make sure to press the SHIFT button prior to pressing the ●II button.

■ Recording from the radio

1	**Tune in to the desired station (see page 15).**
2	**Load a cassette into the cassette compartment with the side to be recorded on facing you.** Wind past the leader of the tape, on which recording cannot be performed.
3	**Press the ●II button.** Recording will be paused. 
4	**Press the ▶II (▶) button to start recording.**

To stop recording:
Press the ■ button.

To interrupt recording:
Press the ●II button.
To resume recording, press the ▶II (▶) button.

Beat cancel
A whistling noise may occur when recording an AM station. Eliminate the noise as follows:

1 Press the ●II button to pause recording.
2 Press the ●II button and select "TP REC A" or "TP REC B" for better reception.

Notes:

- If you hear a whistling noise whilst recording an AM station, move the AM loop aerial.
- If you use the remote control, make sure to press the SHIFT button prior to pressing the ●II button.

■ Erasing recorded tapes

1 Load the tape to be erased into the cassette compartment with the side to be erased facing toward you.
2 Press the FUNCTION button until "TAPE" appears on the display.
When operating with the remote control, press the TAPE button.
3 Press the ●II button.
4 Press the ▶II (▶) button to start erasing.

Note:
If you use the remote control, make sure to press the SHIFT button prior to pressing the ●II button.

Downloaded From Disc-Player.com Sharp Manuals

Timer and sleep operation

This may be operated only with the remote control.

Timer playback:
The unit turns on and plays the desired source (disc, tuner, tape) at a preset time.

Sleep operation:
The radio, disc or cassette tape can be turned off automatically.

Before setting timer:

1 Check that the clock is set to the correct time (refer to page 8).
2 Load a cassette or disc to be played.

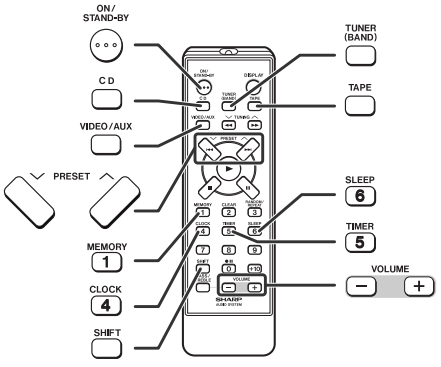

■ Timer playback

1 **Press the ON/STAND-BY button to turn the power on.**

2 **Press the CD, TUNER (BAND) or TAPE button to select the desired function.**
When you selected the TUNER (BAND), tune in to the desired station.

3 **Adjust the volume using the VOLUME buttons.**
Do not turn the volume up too high.

4 **Press the SHIFT button and then the TIMER button. Within 6 seconds, press the SHIFT button and then the MEMORY button.**

5 **Within 1 minute, press the PRESET (∨ or ∧) button to specify the hour to start, then press the SHIFT button and then the MEMORY button.**

6 **Within 1 minute, press the PRESET (∨ or ∧) button to specify the minutes to start, then press the SHIFT button and then the MEMORY button.**

- The timer playback starting time, function, and volume will be displayed, and then the unit will enter the stand-by mode automatically.
- "⏲" will appear and the current time will be displayed.

To cancel the timer playback:
Press the ON/STAND-BY button to turn the power on.

Continued to the next page

Downloaded From Disc-Player.com Sharp Manuals

Timer and sleep operation (continued)

7 When the preset time is reached, playback will start.

The volume will increase gradually until it reaches the volume you were listening at before your system enters the timer stand-by mode.

8 The unit will enter the stand-by mode one hour after the timer playback starts. However, when disc or tape playback time is one hour or less, it will enter the stand-by mode after completing playback.

To reset or change the timer setting:
Perform "Timer playback" from the beginning.

Note:
When performing timer playback using another unit connected to the VIDEO/AUX IN sockets, select "VIDEO/AUX" in step 2. At this time, only this unit will be turned on or enter the power stand-by mode automatically. It will enter the power stand-by mode 1 hour after the timer playback starts. However, the other unit will not be turned on or off.

■ Sleep operation

1 Play back the desired sound source.

2 Press the SHIFT button and then the SLEEP button.



To change the sleep time:

Time decreases as follows each time they are pressed.

The amount of sleep time can also be changed whilst in the sleep mode.

(Maximum: 3 hours - Minimum: 5 minutes)



3 Your system will enter the power stand-by mode automatically after the preset time has elapsed.

The volume will turn down 40 seconds before the sleep operation finishes.

To cancel the sleep operation:
Press the ON/STAND-BY button whilst "SLEEP" is indicated.
To cancel the sleep operation without setting the system to the stand-by mode, press the SHIFT button and then the SLEEP button until "OFF" appears on the display.

To confirm the remaining sleep time:
Press the SHIFT button and then the SLEEP button once whilst the sleep timer is set.
The remaining sleep time is displayed for about 3 seconds.

Downloaded From Disc-Player.com Sharp Manuals

■ To use timer and sleep operation together

Example: To fall asleep and wake up to the same radio station
You can play back the same source only (the function cannot be switched).

1	**Set the sleep time (steps 1 - 2, page 21).**
2	**Whilst the sleep timer is set, set the desired playback time (steps 4 - 6, page 20).**

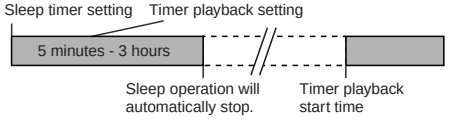
Sleep timer setting
Timer playback setting
5 minutes - 3 hours
Sleep operation will automatically stop.
Timer playback start time

Caution:
When using the cassette deck, be sure the tape length is long enough to perform both functions. If you want to sleep and wake up listening to a tape, and the length of the tape is shorter than the sleep timer setting, timer playback will not be possible.

Enhancing your system

The connection lead is not included. Purchase a commercially available lead as shown below.

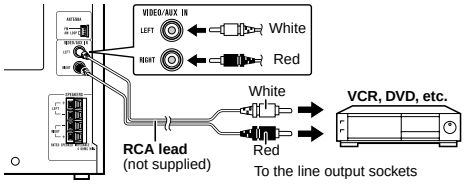

■ Listening to the playback sounds from VCR, DVD, etc.

1 Use a connection lead to connect the VCR, DVD, etc. to the VIDEO/AUX IN sockets.
When using video equipment, connect the audio output to this unit and the video output to a television.
2 Press the ON/STAND-BY button to turn the power on.
3 Press the FUNCTION button until "AUX" appears on the display.
When operating with the remote control, press the VIDEO/AUX button.
4 Play the connected equipment.

Note:
To prevent noise interference, place the unit away from the television.

■ To record on a tape

1 Load a cassette into the cassette compartment with the side to be recorded on facing you.
2 Press the FUNCTION button until "AUX" appears on the display.
When operating with the remote control, press the VIDEO/AUX button.
3 Press the ●II button.
On the remote control, press the SHIFT button and then the ●II button.
4 Press the ▶II (▶) button.
5 Play the VCR, DVD, etc.

Downloaded From Disc-Player.com Sharp Manuals

Troubleshooting chart

Many potential problems can be resolved by the owner without calling a service technician.
If something is wrong with this product, check the following before calling your authorised SHARP dealer or service centre.

■ General

Symptom	Possible cause
● The clock is not set to the correct time.	● Did a power failure occur? Reset the clock. (Refer to page 8.)
● When a button is pressed, the unit does not respond.	● Set the unit to the power stand-by mode and then turn it back on. ● If the unit still malfunctions, reset it. (Refer to page 24.)
● No sound is heard.	● Is the volume level set to "0"? ● Are the headphones connected? ● Are the speaker wires disconnected?

■ CD player

Symptom	Possible cause
● Playback does not start. ● Playback stops in the middle or is not performed properly.	● Is the disc loaded upside down? ● Does the disc satisfy the standards? ● Is the disc distorted or scratched?
● Playback sounds are skipped, or stopped in the middle of a track.	● Is the unit located near excessive vibrations? ● Is the disc very dirty? ● Has condensation formed inside the unit?

■ Tuner

Symptom	Possible cause
● The radio makes unusual noises continuously.	● Is the unit placed near the TV or computer? ● Is the FM/AM loop aerial placed properly? Move the aerial away from the AC power lead if located nearby.

■ Cassette deck

Symptom	Possible cause
● Cannot record.	● Is the erase-prevention tab removed?
● Cannot record tracks with proper sound quality. ● Cannot erase completely.	● Is it a normal tape? (You cannot record on a metal or CrO_2 tape.)
● Sound skipping. ● Cannot hear treble. ● Sound fluctuation.	● Is there slack in the tape? ● Is the tape stretched? ● Are the capstans, pinch rollers, or heads dirty?
● Cannot remove the tape.	● If a power failure occurs during playback, the heads remain engaged with the tape. Do not open the compartment with great force.

Downloaded From Disc-Player.com Sharp Manuals

■ Remote control

Symptom	Possible cause
● The remote control does not operate.	● Is the AC power lead of the unit plugged in? ● Is the battery polarity correct? ● Are the batteries dead? ● Is the distance or angle incorrect? ● Does the remote control sensor receive strong light?

■ If trouble occurs

When this product is subjected to strong external interference (mechanical shock, excessive static electricity, abnormal supply voltage due to lightning, etc.) or if it is operated incorrectly, it may malfunction.

If such a problem occurs, do the following:

1 Set the unit to the stand-by mode and turn the power on again.
2 If the unit is not restored in the previous operation, unplug and plug in the unit, and then turn the power on.

Note:

If neither operation above restores the unit, clear all the memory by resetting it.

■ Clearing all the memory (reset)

1 Press the ON/STAND-BY button to enter the power stand-by mode.
2 Whilst pressing down the MEMORY/SET button and the PRESET ∨ button, press the ON/STAND-BY button until "CL" appears.

Caution:

This operation will erase all data stored in memory including clock, timer settings, tuner preset, and CD programme.

■ Condensation

Sudden temperature changes, storage or operation in an extremely humid environment may cause condensation inside the cabinet (CD pickup, tape heads, etc.) or on the transmitter on the remote control. Condensation can cause the unit to malfunction. If this happens, leave the power on with no disc (or cassette) in the unit until normal playback is possible (about 1 hour). Wipe off any condensation on the transmitter with a soft cloth before operating the unit.

Downloaded From Disc-Player.com Sharp Manuals

Maintenance

■ Cleaning the CD pickup lens

Do not touch the laser pickup lens. If fingerprints or dust accumulate on the pickup, clean it gently with a dry cotton swab.

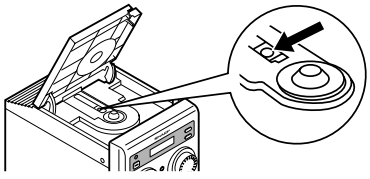

■ Cleaning the cabinet

Periodically wipe the cabinet with a soft cloth and a diluted soap solution, then with a dry cloth.

Caution:

- Do not use chemicals for cleaning (petrol, paint thinner, etc.). It may damage the cabinet finish.
- Do not apply oil to the inside of the unit. It may cause malfunctions.

■ Cleaning the tape-handling parts

- Dirty heads, capstan or pinch roller can cause poor sound and tape jams. Clean these parts with a cotton swab moistened with commercial head/pinch roller cleaner or isopropyl alcohol.
- When cleaning the heads, pinch roller, etc., unplug the unit which contains high voltages.

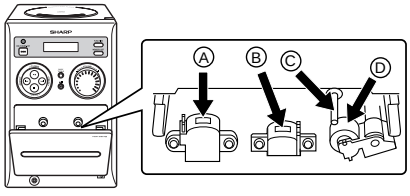

Ⓐ Erase head
Ⓑ Recording/Playback head
Ⓒ Capstan
Ⓓ Pinch roller

- After long use, the deck's heads and capstan may become magnetised, causing poor sound. Demagnetise these parts once every 30 hours of playing/recording time by using a commercial tape head demagnetiser. Read the demagnetiser's instructions carefully before use.

SHARP TINSZA040SJZZ (H)
05/1/14 XL-MP40H(H)E2.fm TINSZA040SJZZ

Downloaded From Disc-Player.com Sharp Manuals

Specifications

As part of our policy of continuous improvement, SHARP reserves the right to make design and specification changes for product improvement without prior notice. The performance specification figures indicated are nominal values of production units. There may be some deviations from these values in individual units.

■ General

Power source	AC 230 V, 50 Hz
Power consumption	Power on: 25 W Power stand-by: 0.9 W
Dimensions	Width: 160 mm (6-5/16") Height: 240 mm (9-1/2") Depth: 245 mm (10")
Weight	2.5 kg (5.5 lbs.)

■ Amplifier

Output power	PMPO: 30 W (total) MPO: 15 W (7.5 W + 7.5 W) (DIN 45 324) RMS: 10 W (5 W + 5 W) (DIN 45 324)
Output terminals	Speakers: 4 ohms Headphones: 16 - 50 ohms (recommended: 32 ohms)
Input terminals	Video/Auxiliary (audio signal): 500 mV/47 k ohms

■ Tuner

Frequency range	FM: 87.5 - 108.0 MHz AM: 522 - 1,620 kHz

■ CD player

Type	Compact disc player
Signal readout	Non-contact, 3-beam semiconductor laser pickup
D/A converter	1-bit D/A converter
Frequency response	20 - 20,000 Hz
Dynamic range	90 dB (1 kHz)

■ Cassette deck

Frequency response	50 - 14,000 Hz (normal tape)
Signal/noise ratio	50 dB (recording/playback)
Wow and flutter	0.35 % (DIN 45 511)

■ Speaker

Type	10 cm (4") full-range speaker
Maximum input power	10 W
Rated input power	5 W
Impedance	4 ohms
Dimensions	Width: 145 mm (5-3/4") Height: 240 mm (9-1/2") Depth: 180 mm (7-1/16")
Weight	1.4 kg (3.1 lbs.)/each

Downloaded From Disc-Player.com Sharp Manuals

SHARP

SHARP CORPORATION

TINSZA040SJZZ
05A N HK ①

Downloaded From Disc-Player.com Sharp Manuals

UP

DOWN

XL-MP40H MICRO COMPONENT SYSTEM SHARP

05/1/14 XL-MP40H(H)_SP.fm TINSZA040SJZZ

Downloaded From Disc-Player.com Sharp Manuals